

# PROPSHAFT INSTALLATION INSTRUCTIONS

You are urged to refer to a suitable service manual before attempting to make repairs. If you do not have a manual or lack the experience to make such repairs, you should seek the services of a qualified technician.

1. Raise and support vehicle at the OEM recommended points.
2. Remove any bolts, straps or U-bolts retaining the original propshaft (save hardware for reuse).
3. Remove the original propshaft from vehicle.
4. Compare the original unit to the replacement unit. The replacement unit may differ in appearance, however it will fit and function in the application for which it is listed.
5. Inspect yoke and mounting hardware for excessive wear or movement. Repair or replace components as necessary.
6. To install the propshaft, reverse the removal procedure.
7. Install the mounting hardware (U-bolts, yoke bolts, straps) and torque to OEM specifications.

**NOTE:** **DO NOT overtorque the U-joint retaining hardware! This will cause the U-joint cups to distort and bind!**