

# CARDONE ProTech

Supporting Today's Professional Technician



## Angle Mounted Master Cylinder Bleeding Procedure

**Application:** All angle-mounted master cylinders.


**Problem:** Unable to obtain a firm brake pedal when bleeding master cylinder on vehicle

**Cause:** Air trapped in the upper end of the master cylinder past the secondary port.


**Solution:** When bleeding brakes system, raise rear of vehicle until master cylinder bore is level as shown below.

CAUTION: Some fluid should be removed from the reservoir to avoid spilling as vehicle is raised.

Air becomes trapped here

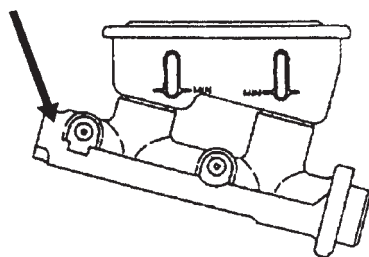

Normal mounted master cylinder

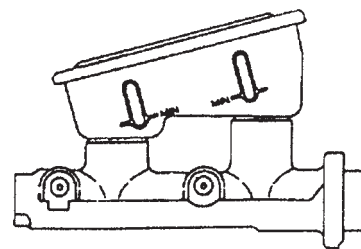

Correct bleeding position

**Note:** Always flush entire brake system with approved fluid when any brake component is replaced.

For other ProTech publications, visit [www.cardone.com](http://www.cardone.com)  
CARDONE Industries, Inc. • 5501 Whitaker Ave. • Philadelphia, PA 19124-1799